


SCHLAM ✦

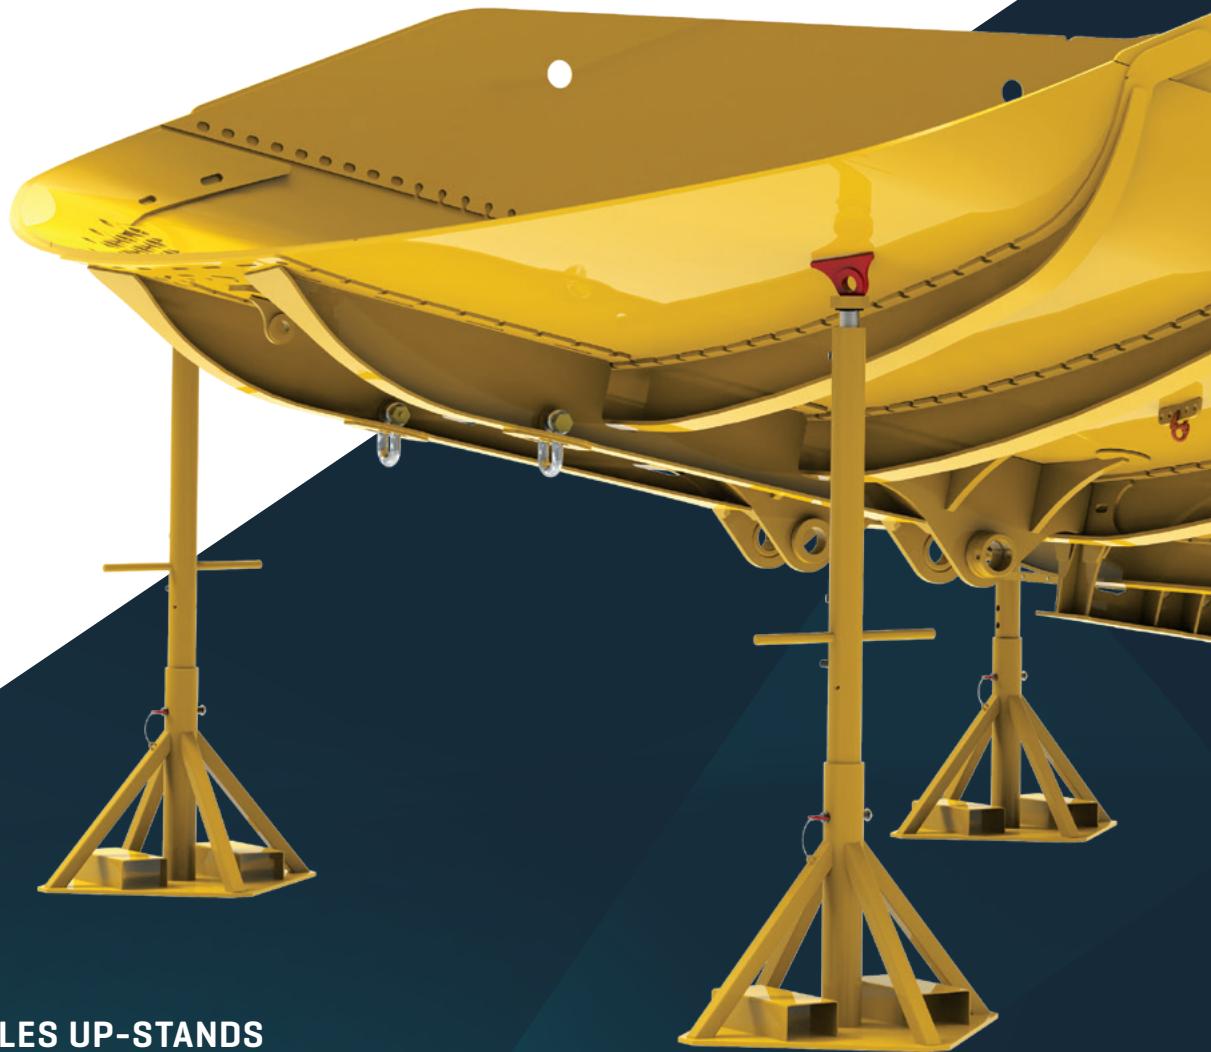

SCHLAM HERCULES UP-STANDS

THE EASY WAY TO
UNLOAD YOUR HERCULES






NO CRANE REQUIRED

UNLOAD YOUR HERCULES CRANE-FREE

Schlam Hercules Up-Stands enable crane-free handling of your Hercules, saving the need to coordinate extra equipment and people when unloading your new dump body. Using the four stands, you can quickly unload your Hercules as soon as the delivery truck arrives on site. In areas prone to high winds, eliminating the crane also means one less uncertainty you need to worry about.

HOW SCHLAM HERCULES UP-STANDS WORK

Once your new Hercules arrives on site, the stands are installed under the dump body whilst still on the transport float. The float is then lowered, so your Hercules is fully supported by the stands, then the delivery truck can drive away. The stands can also be used for safe storage of your Hercules dump bodies during maintenance.

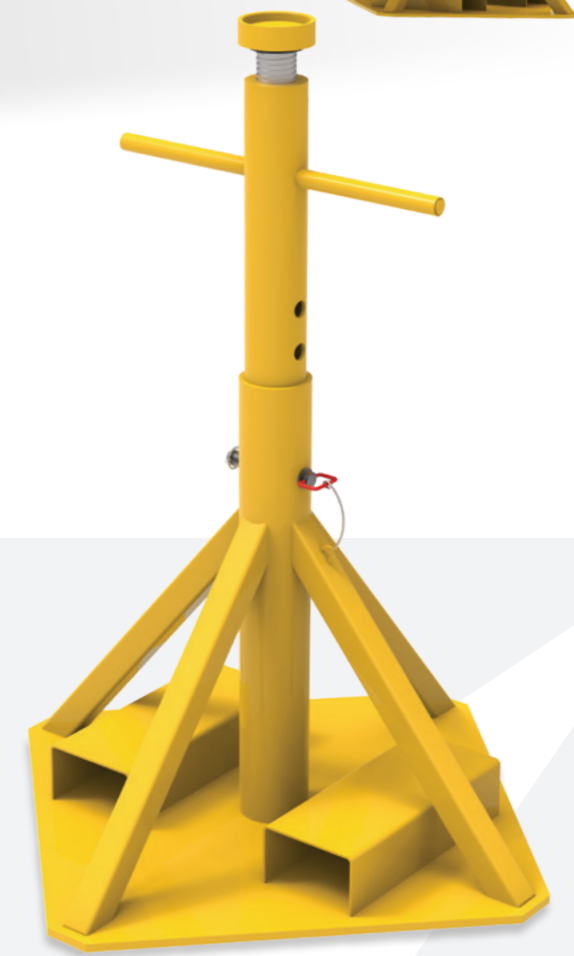

BENEFITS OF SCHLAM HERCULES UP-STANDS

- CRANE-FREE UNLOADING OF YOUR HERCULES DUMP BODY
- NO DELAYS IN AREAS PRONE TO HIGH WINDS
- SAVES COORDINATING EXTRA PEOPLE AND EQUIPMENT
- DELIVERY TRUCK CAN LEAVE SITE QUICKER

FEATURES OF SCHLAM HERCULES UP-STANDS

- EASY TO INSTALL AND USE
- DESIGNED FOR USE WITH HERCULES
- EACH STAND LOAD RATED TO 15 TONNE

DESIGNED AND MANUFACTURED TO AUSTRALIAN STANDARDS





SPEAK TO OUR PAYLOAD TEAM TODAY

AUSTRALIA [08] 6148 5555
INTERNATIONAL +61 8 6148 5555
EMAIL PAYLOAD@SCHLAM.COM

schlam.com

ABOUT SCHLAM

What we do at Schlam is make mining equipment more productive. How we do it is by solving the payload and maintenance challenges that keep mines from being better tomorrow than they were today. We started in 1996 as a problem-solving engineering business. Today, we provide payload solutions to mines on six continents and our maintenance people are high achievers in every discipline.

Head Office

435 B&C Dundas Road
Forrestfield 6058
Western Australia